

Wireless Programmable Room Thermostat RDL211RF.ST RDL131RF.ST



RDL211RF.ST






















 






RDL131RF.ST



cs	Návod k montáži
da	Monteringsvejledning
de	Montageanleitung
el	Οδηγίες τοποθέτησης
en	Mounting instructions
es	Instrucciones de montaje
et	Paigaldusjuhised
fi	Asennusohjeet
fr	Instructions de montage
hu	Telepítési leírás
it	Istruzioni di montaggio


lt	Montavimo instrukcijos
lv	Montāžas instrukcijas
nl	Montageaanwijzing
no	Monteringsinstruksjoner
pl	Instrukcja montażu
pt	Instruções de instalação
ro	Instructiuni de montaj
sk	Návod na montáž
sv	Monteringsinstruktion
tr	Montaj talimatları
zh	安装指南

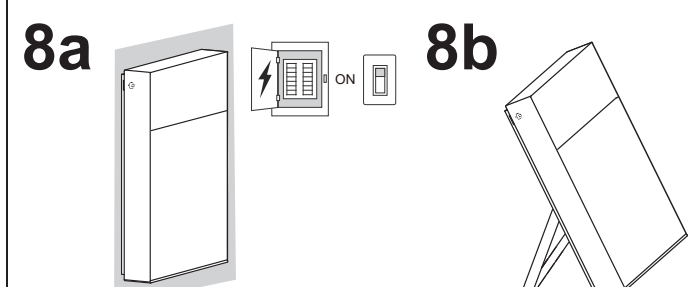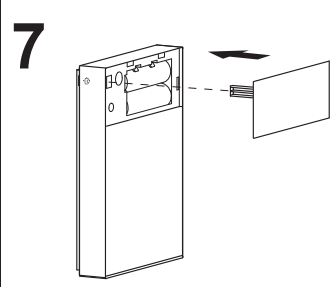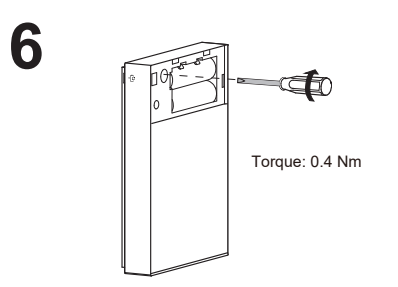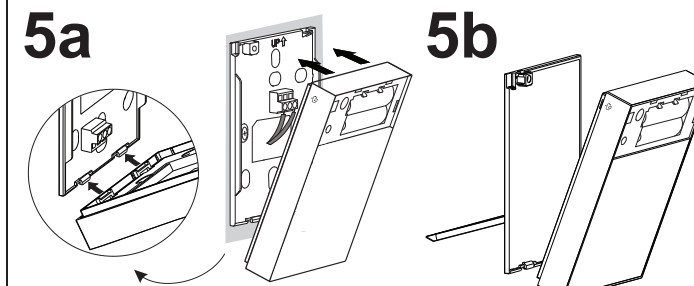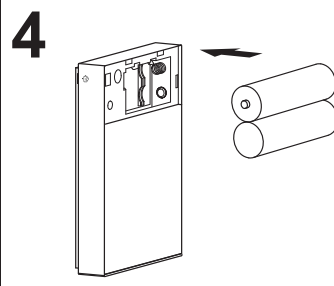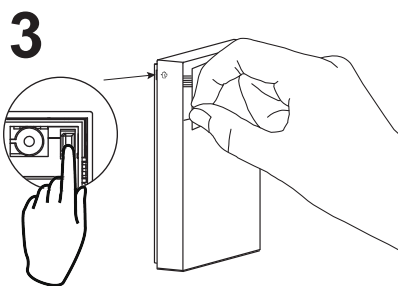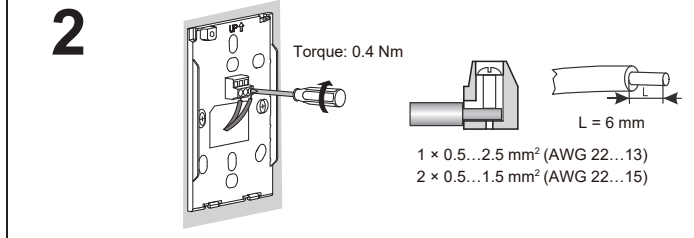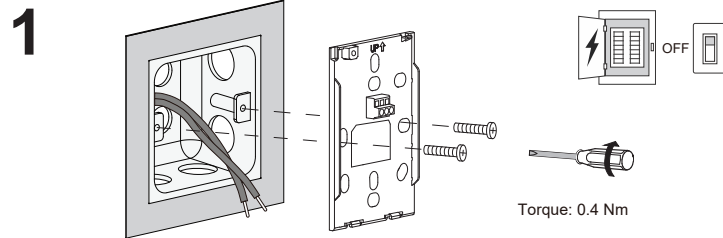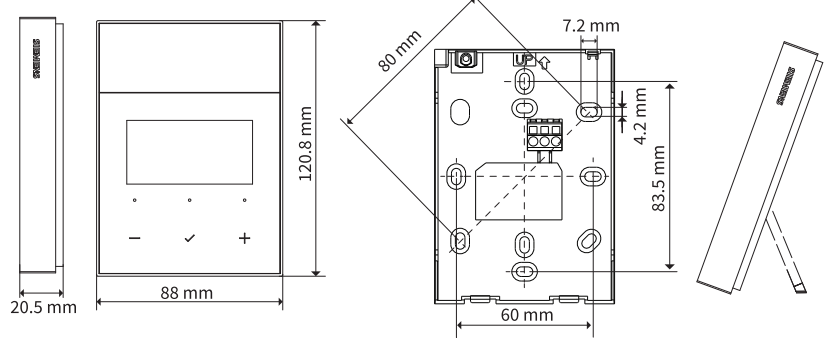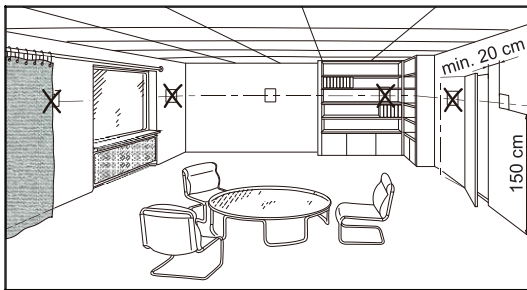

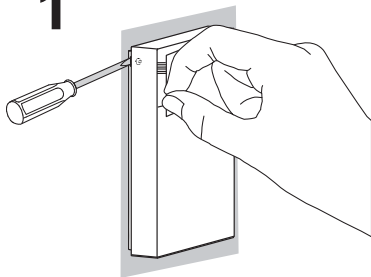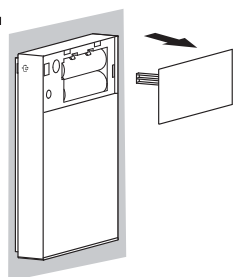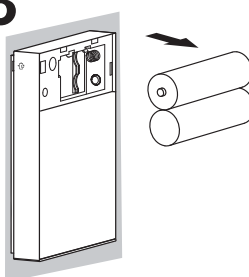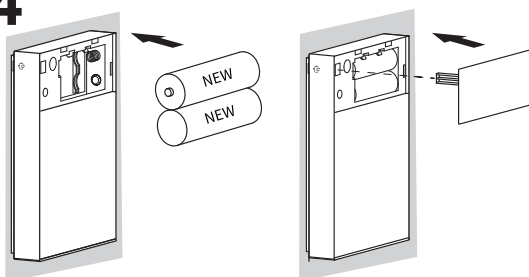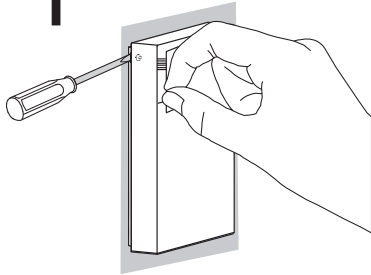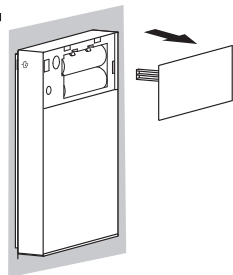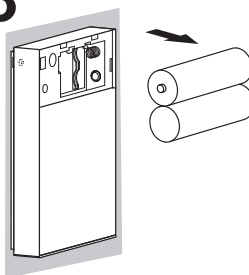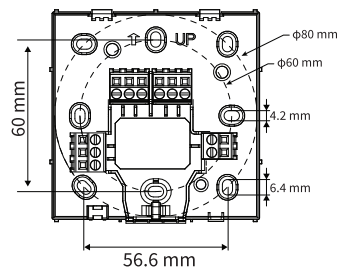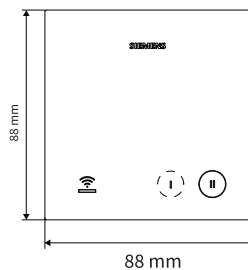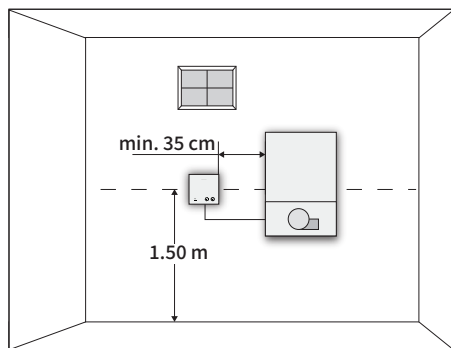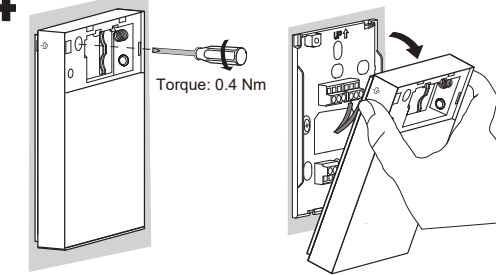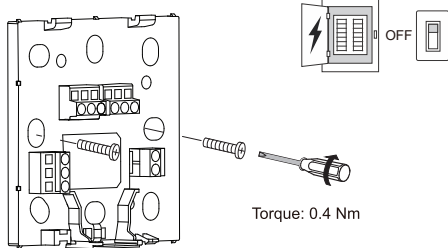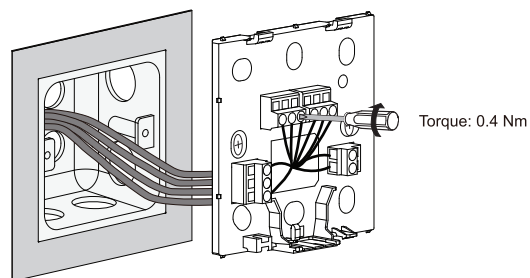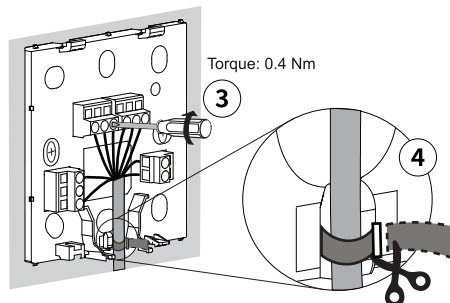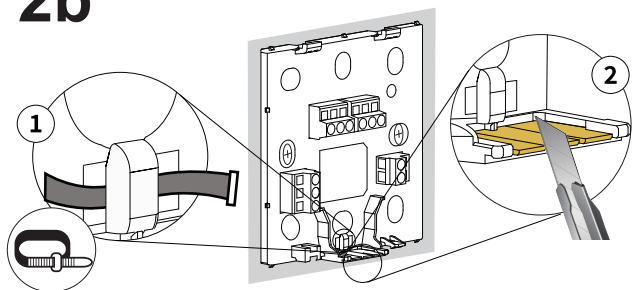
**1****2****3****4****1****2****3****4****1****2a****2b**

1 × 0.5...2.5 mm² (AWG 22...13)
2 × 0.5...1.5 mm² (AWG 22...15)


3

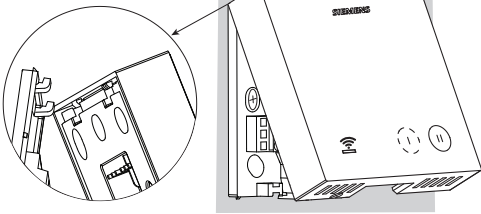

4

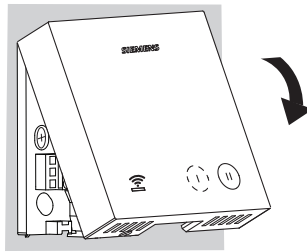


5

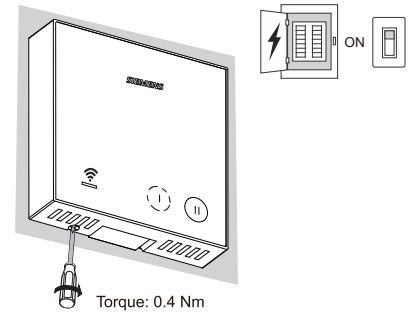

<http://www.siemens.com/download?A6V16531087>
<http://www.siemens.com/download?A6V16531192>


On/off devices

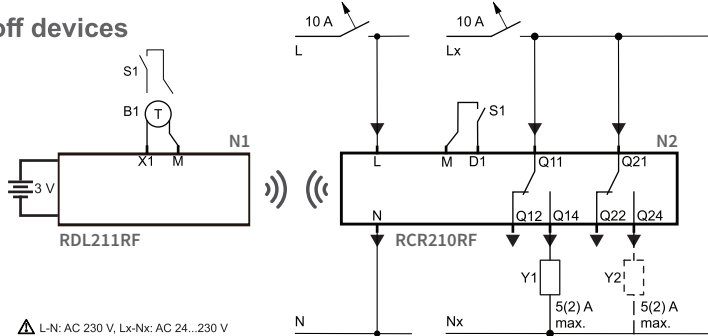

P01	Y1	Y2
1 = HEATING		→ P50
2 = COOLING		→ P50
3 = HEAT/COOL		→ P50
4 = HEAT/COOL+CO		Chovr
5 = HEAT+COOL		

P04
1 = ON/OFF


3-position valve actuator

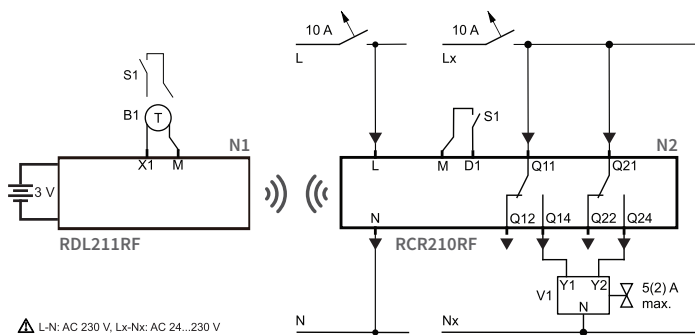

P01
1 = HEATING
2 = COOLING
3 = HEAT/COOL

P04
2 = 3-POSITION


Heat pump (reversible/non-reversible) or boiler

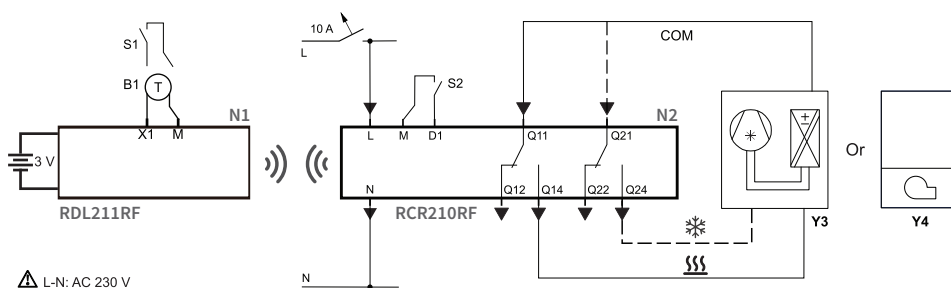

P01
1 = HEATING
5 = HEAT + COOL


P04
1 = ON/OFF

Reversible heat pump

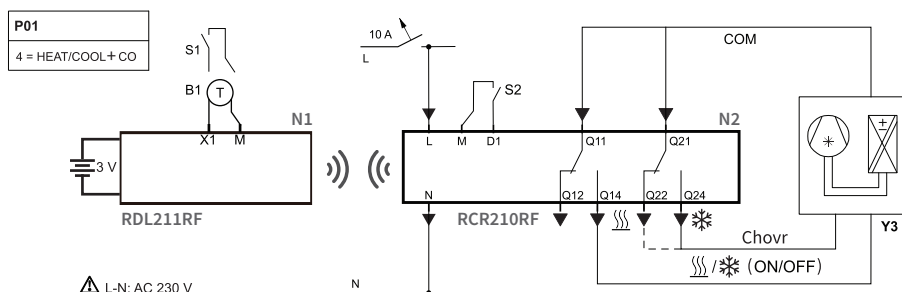

P01
4 = HEAT/COOL+CO

OpenTherm® boiler

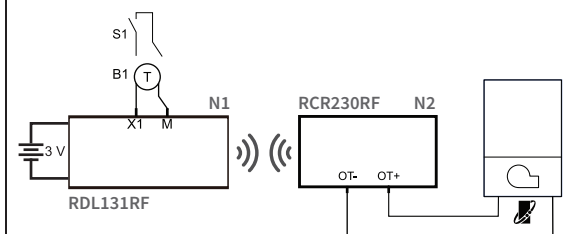



Mobile app



Quick Config

